

Sparco Suit Sizing Chart

Unit: cm

Parts	44	46	48	50	52	54	56	58	60	62	64	66
A. CHEST CIRCUMFERENCE	86-89	90-93	94-97	98-101	102-105	106-109	110-113	114-117	118-121	122-125	126-129	130-133
B. WAIST CIRCUMFERENCE	74-77	78-81	82-85	86-87	88-93	94-97	98-101	102-105	106-109	110-113	114-117	118-121
C. PELVIS CIRCUMFERENCE	86-89	90-93	94-97	98-101	102-105	106-109	110-113	114-117	118-121	122-125	126-129	130-133
D. THIGH CIRCUMFERENCE	45-48	47-50	49-52	51-54	54-57	56-59	59-62	61-64	64-67	67-70	69-72	72-75
E. SHOULDER WIDTH	37-40	39-42	41-44	42-46	45-48	47-50	49-52	51-54	53-56	56-58	57-60	59-62
F. SLEEVE LENGTH	54-57	56-59	58-61	60-63	62-65	64-67	66-69	68-71	70-73	72-75	74-77	76-79
G. FRONTAL CHEST LENGTH	62-64	64-66	66-68	68-70	70-72	72-74	74-76	76-78	78-80	80-82	82-84	84-86
H. EXTERNAL LEG LENGTH	97-100	98-101	99-102	100-103	101-104	102-105	103-106	103-107	105-108	107-110	108-111	109-112
L. INSEAM LEG LENGTH	72-74	73-75	74-76	75-77	76-78	77-79	78-80	79-81	80-82	81-83	82-84	83-85
M. BACK LENGTH	41-43	42-43	42-44	43-44	44-45	45-46	46-48	48-49	49-51	51-52	52-54	53-55
N. NECK CIRCUMFERENCE	37-38	38-39	39-40	40-41	41-42	42-43	43-44	45-46	46-47	47-48	48-49	51-52
HEIGHT	164-167	167-170	170-173	173-176	176-179	179-182	182-185	185-188	188-191	191-194	194-197	197-200
WEIGHT	54kg	60kg	66kg	72kg	78kg	84kg	90kg	96kg	102kg	108kg	114kg	120kg

How to Measure

